

## Filling and Capping Instructions

# Dyno



Insert a twin needle coming with the package into the two filling holes. We recommend an oil temperature range of 90°F-130°F when filling.

### Caution:

- Do not allow oil to enter the two airways.
- Do not overfill. If you overfill a disposable, the extract will be forced through the atomizer and leak out of the bottom of the disposable when the mouthpiece is capped.



Capping the mouthpiece by hand punch immediately after filling.

### Caution:

- The disposable must be upright and centered with the mouthpiece when pressing down.
- Failure to capping immediately after filling may cause leakage.



Allow your disposable to stand for at least 30 minutes.

During this time, oil is priming the atomizer. The rate that the atomizer saturates is dependent upon the viscosity of the oil. More viscous oils will require more time.