




## **Kushcart Acute POD Vape**

**KC-P40I/C05 (0.5ML) C10(1.0ML)**

**EmPower Your Oil & Brand to be the BEST.**

**Customized Device Settings for the BEST Oil Performance  
with Device Counterfeit Authentication**

## DIMENSION

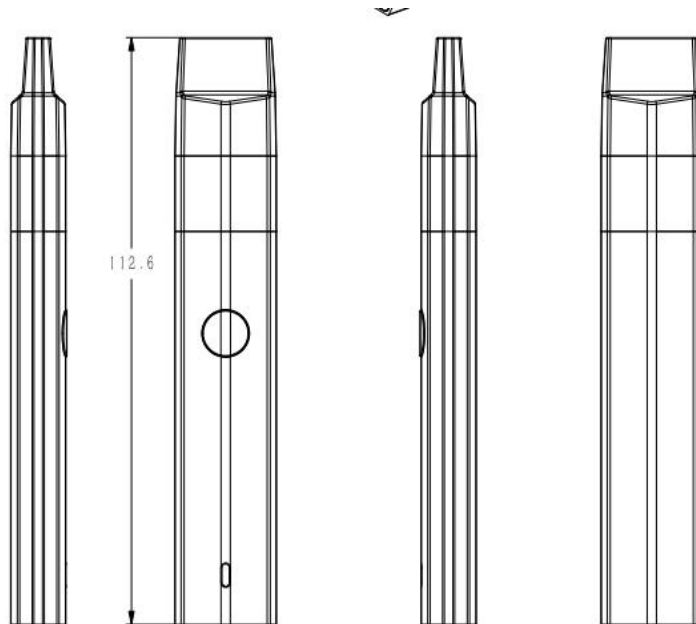

## FEATURE

- Button Activated
- Rechargeable Battery
- Aluminum Alloy Housing and PCTG Tank
- Button Operation
- 5 clicks on the button to turn on/off the device.
- 2 clicks to activate 15s preheat mode.
- Short Circuit Protection
- Short circuit protection is triggered when the device is enabled. LED indicator stays on for 2 seconds.
- Over Current Protection
- The device trips and breaks the circuit when an over current is detected. LED indicator stays on for 2 seconds.
- Timeout Protection
- The device will stop working in case of exceeding 10 seconds and stop preheating when exceeding 15 seconds. LED indicator flashes 2 times.
- Charging
- LED indicator flashes 10 times when the battery is too low, and there will be no response when the battery has completely run out.
- LED indicator fades in and out when charging and stays on when fully charged.

## Disposable Specification

Item	Parameter
Dimension	0.5ml: 105.6×19.5×10.6 (mm) 1.0ml: 112.6×19.5×10.6 (mm)
Tank Volume	0.5ml/1.0ml
Resistance	1.4Ω
Aperture Size	1.6mm
Aperture Number	4
Battery Capacity	300mAh±20mAh
Heating Core Material	Ceramic
Tank Material	PCTG
Center Post	SUS316L
Power On/ Off	5 Clicks on the Button
Preheat Mode	2 Clicks on the Button
Output Voltage	3.5V
Charging Voltage	4.5-5.5V
Storage Temperature	23°C ± 5°C
Working Temperature	-10°C ~ +50°C

## Ordering Information

<b>KC-P40/C05</b>	0.5ml
<b>KC-P40/C10</b>	1.0ml

## Color Customize Available



### How to Use

- To turn on/off the device, click on the button 5 times rapidly. The indicator light will stay on for 2 seconds to indicate it is on and flash 1 time for powering off. Once it is on, it's ready for use.
- To activate the Preheat Mode, click on the button 2 times rapidly. The indicator light will keep flashing and runs at a low voltage of 1.8V. Preheat mode will last for 15 seconds.

### Pod Cartridge Oil Filling Instructions

#### 1. Fill the tank with your favorite oil.

Gently put the syringe between the airway and the outer wall of the cartridge and fill the cartridge with oil at a proper speed.

#### 2. Immediately cap the cartridge after filling, press-fit the mouthpiece with a special jig.

##### Notes

- ▲ Do not inject the oil into the airway!
- ▲ Do not top off the tank with oil.
- ▲ We highly recommend to use capping machine or hand punch to press the mouthpiece.

### Storage

1. The storage temperature is  $23\pm 5^{\circ}\text{C}$  and the humidity is  $50\pm 10\%$  RH.
2. Place in a cool, dark and ventilated place.
3. Keep the pod sealed storage and avoid direct sunlight.
4. The storage period should not be too long, so as not to exceed the shelf life of oil.

### 7. Notes

1. Pay attention to the shelf life of filled oil.
2. Handle the aluminum alloy housing with care. Do not crush, throw, or twist the housing.