




Acute Vape

0.5ML/1.0ML/2.0ML

EmPower Your Oil & Brand to be the BEST.

Customized Device Settings for the BEST Oil Performance with Device Counterfeit Authentication.




99 Inverness Drive East Suite #180

Tel: 1 (720) 303-6806660 Email: <u>sales@thekushcart.com</u>





DIMENSION

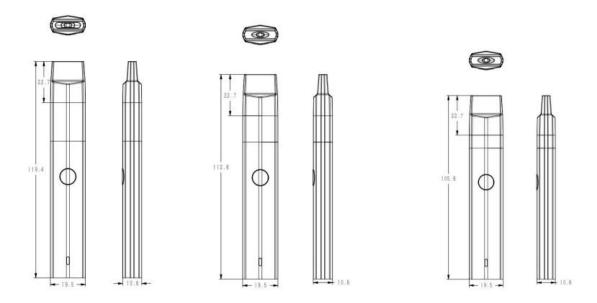

FEATURE

• Proprietary Programmed Disposable — an AIO with Intelligence!

An evolution in disposable authentication, solving the most challenging problems in this industry once for all. Best Disposable Vape for High Viscosity Extracts.

Manufactured at an ISO13485 pharma-grade and GMP Certified facility.

Vapor tube made from SUS316L Stainless Steel.

The UL Certified 300mAh battery is rechargeable via a micro-USB port, built-in at the base, ensuring that your disposable will always have the charge to get to the very last drop

Disposable Specification

Volume	0.5ml 1.0ml 2.0ml
Dimension	19.5 x 10.6 x 105.6mm (0.5ml) 19.5 x 10.6 x 110.6mm (1.0 ml) 19.5 x 10.6 x 119.4mm (2.0 ml)
Airflow	Bottom Airflow
Filling Method	Top Fill
Mouthpiece Material	PC
Mouthpiece Style	Flat
Resistance	1.4Ω
Mouthpiece Material Mouthpiece Style	PC Flat

99 Inverness Drive East Suite #180 Englewood, CO 80112-5122 U.S.A.

Tel: 1 (720) **303-6806660** Email: <u>sales@thekushcart.com</u> KUSHCART LLC http://thekushcart.com



360 Post less Disposable | Acute




Heating Core Material	Ceramic
Center Post	SUS316L
Tank Material	PCTG
Aperture Size	1.6mm*4 or 2.0*4
Activation	Button Activated: To turn on/off the device, click the button 5 times rapidly. The LED light will flash 1 time to indicate it is on.
Preheat Mod	1.8V (2 Clicks on the Button to Activate Preheat Mode)
Battery Capacity	300mAh ± 20mAh
Output Voltage	3.5V
Charging Port	Type-C

Color Customize Available



Filling Guide:

- 1. Fill the tank with your cannabis oil. Gently put the syringe between the airway and the outer wall of the oil tank and fill the tank with oil at a proper speed.
- ▲ Do not allow oil to enter the center airway!
- ▲ Do not top off the tank with oil.



Tel: 1 (720) **303-6806660** Email: <u>sales@thekushcart.com</u> KUSHCART LLC http://thekushcart.com



360 Post less Disposable | Acute



- ▲ While filling oil, avoid dropping oil onto the shell to prevent chemical reactions. If so, please wipe it off immediately.
- 2. Press on the mouthpiece within 3 minute after filling! We highly recommend to use capping machine to press on the mouthpiece.
- ▲ Failure to insert the mouthpiece immediately after filling may cause leakage.
- ▲ Cap the product with a hand punch or a professional capping machine.

Notification

- 1. Do not throw the product into water or get it wet.
- 2. Do not heat the product.
- 3. Do not use or store next to a heat source such as a fire or heater.
- 4. Do not hit, throw or subject the product to severe mechanical shock.
- 5. Do not use nails or other sharp objects to pierce the shell of this product. Do not hammer or pedal the product. 6. Do not disassemble the





