



Clarity Disposable Vape


0.5ml & 1.0ml

EmPower Your Oil & Brand to be the BEST.

Customized Device Settings for the BEST Oil

Performance with Device Counterfeit Authentication.

Dimension (Picture and Description)

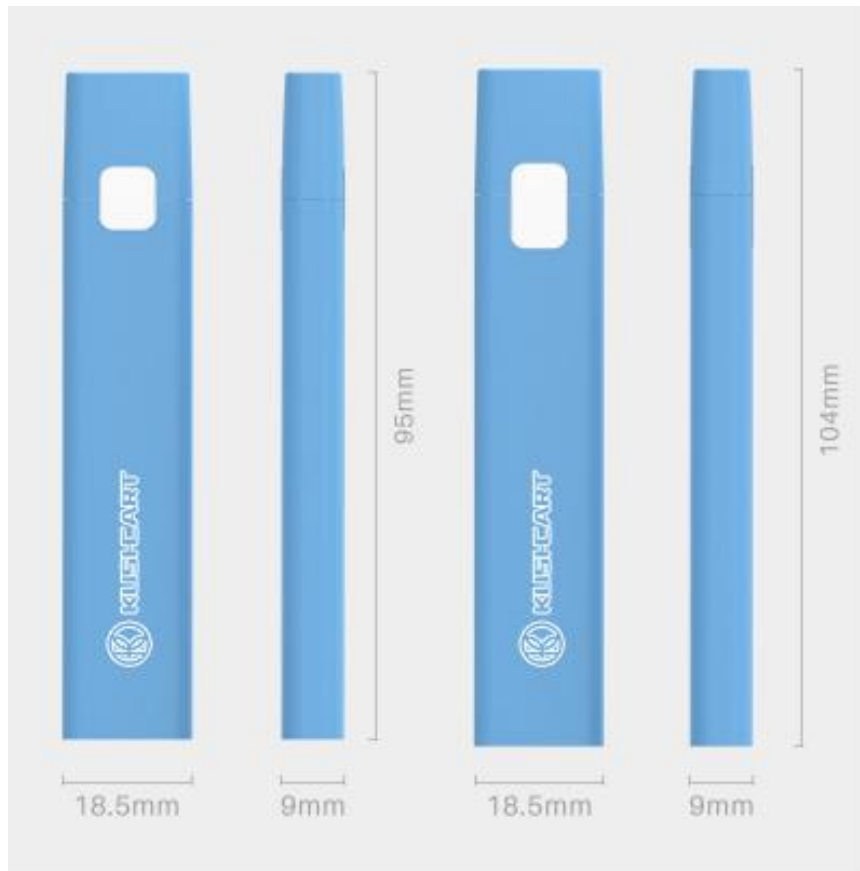

Dimension: 18.5 x 9 x 95mm(0.5ml)/18.5 x 9 x 104mm(1.0ml)

Appearance: There are no scratches, cracks, stains, uneven colors, unclear logos, and fades on the appearance of this product.

Features

- Draw Activated
- Cotton Free Ceramic Core
- Unique Core Shape Design
- No Center Post
- Real No-clogging
- Vaping at Low-temp
- Pure Flavor, Large Clouds
- Rechargeable Battery

- Touch Sensor & Operation
4 taps to activate preheat mode
1 tap to end preheat mode

- Short Circuit Protection

Short circuit protection is triggered when the device is enabled. LED indicator flashes 3 times.

- Timeout Protection

The device will stop working in case of exceeding 8 seconds. LED indicator flashes 6 times.

- Overload Protection

Overload protection is triggered when the current rises above a limit. LED indicator flashes 3 seconds.

- Out of Power

LED indicator flashes 8 times when the battery is too low, and there will be no response when the battery has completely run out.

- Charging

LED indicator stays on when charging and turns off when fully charged.

- Accidental Activation Protection

If the device is activated multiple times in a short period, accidental activation protection will be triggered. (The protection duration will be doubled for every trigger, with a maximum duration of 18.2 hours and an initial value of 30 seconds.) LED indicator keeps flashing.

Main Technical Parameter

Item	Parameter
Dimension	18.5 x 9 x 95mm/18.5 x 9 x 104mm
Volume	0.5ml/1.0ml
Heating Core Material	Ceramic
Mouthpiece Material	PC
Tank Type	PCTG
Resistance	1.3Ω

Activation	Draw Activated
Preheat Mode	4 Taps on the USB Port
Battery Capacity	280mAh
Battery Housing	Aluminum Profile
Output Voltage	3.5V
Charging Voltage	4.5-5.5V
Storage Temperature	23±5°C
Working Temperature	-10°C~+50°C
Timeout Protection	Flash 6 Times
Short Circuit Protection	Flash 3 Times
Low Voltage Protection	Flash 8 Times
Overload Protection	Flash 3 Times
Charge Port	Type-C

How to Use

- To turn on/off the device, tap on the USB port 5 times rapidly. The indicator light will flash 2 times to indicate on and 1 time for powering off. Once it is on, it's ready for use.
- To activate the Preheat Mode, tap on the USB port 4 times rapidly. The breathing LED indicator fades in and out and runs at a low voltage of 1.8V. Preheat mode will last for 15 seconds. Users can start inhalation at any time during preheating or tap 1 time to end the preheat mode.

Filling Guide

1. Fill the tank with your cannabis oil.

Gently put the syringe into the tank and fill the tank with oil at a proper speed.

▲ *Do not top off the tank with oil.*

▲ *While filling oil, avoid dropping oil onto the shell to prevent chemical reactions. If so, please wipe it off immediately.*

2. Press on the mouthpiece immediately after filling!

▲ *Failure to insert the mouthpiece immediately after filling may cause leakage.*

▲ *We highly recommend using a capping machine or hand punch to press the mouthpiece.*

Storage

1. The storage temperature is $23\pm5^{\circ}\text{C}$ and the humidity is $50\pm10\%$ RH.
2. Place in a cool, dark and ventilated place.
3. Keep the disposable sealed storage and avoid direct sunlight.

Notification

1. Pay attention to the shelf life of filled oil.
2. Handle the product with care. Do not throw, or twist the product.