




Cartridge

KC02 0.5ml / 1.0ml

Dimension (Picture and Description)

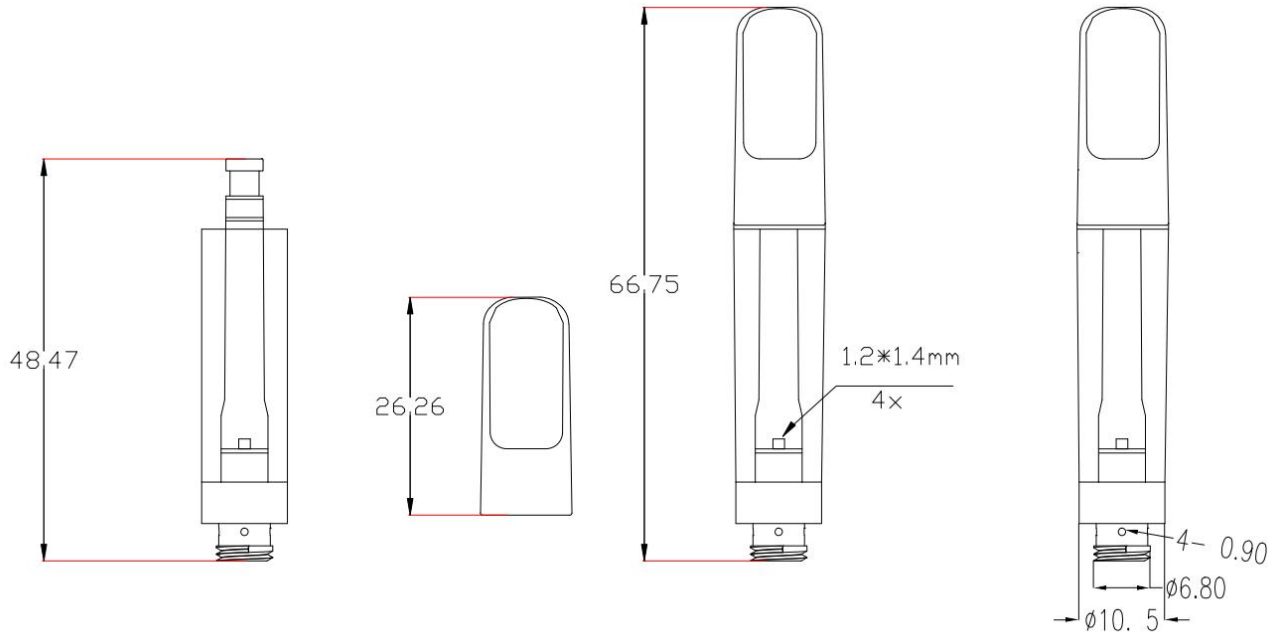

Features

- Ceramic Heating Core
- Ceramic Center Post
- Pure Flavor, Large Clouds
- Open-Top Tank Design
- High Cost-Performance

Main Technical Parameter

Item	Parameter
Volume	1.0ml
Resistance	1.4 Ω
Aperture Inlet	4 x ϕ 1.8mm
Dimension	ϕ 10.7 × 65mm
Heating Core Material	Ceramic
Tank Material	PCTG
Mouthpiece Material	Ceramic
Center Post	Ceramic
Thread	510
Outer Thread Material	Chrome plated copper
Storage Temperature	23 \pm 5 $^{\circ}$ C
Working Temperature	-10 $^{\circ}$ C ~ +50 $^{\circ}$ C

Filling Guide

1. Fill the tank with your cannabis oil.

Gently put the syringe between the airway and the outer wall of the oil tank and fill the tank with oil at a proper speed.

- *Do not overfill or allow oil to enter the center airway!*

2. Capping the Cartridge

Immediately after filling, insert and press-fit the mouthpiece until it is fully seated.

- *Failure to insert the mouthpiece immediately after filling may cause leakage.*
- *We highly recommend using a capping machine or hand punch to press the mouthpiece.*

Storage

1. The storage temperature is 23 \pm 5 $^{\circ}$ C and the humidity is 50 \pm 10% RH.

2. Place in a cool, dark and ventilated place.
3. Keep the disposable sealed storage and avoid direct sunlight.
4. The storage period should not be too long, so as not to exceed the shelf life of oil.

Notification

1. Pay attention to the shelf life of filled oil.
2. Handle the product with care. Do not throw, or twist the product.